

Firewall Robusto™

NEW GENERATION POWER CONDITIONER

DIY version for Self-installation


CONNECTION SCHEMATICS

This unit conditions the current for a **single** line only.

Load is your equipment's current hungry schematic.

Source is your electrical utility's supply of power. (Power from the "wall.")

Note directional **arrow** on Firewall Robusto™ side wall determines proper current direction between source and load.

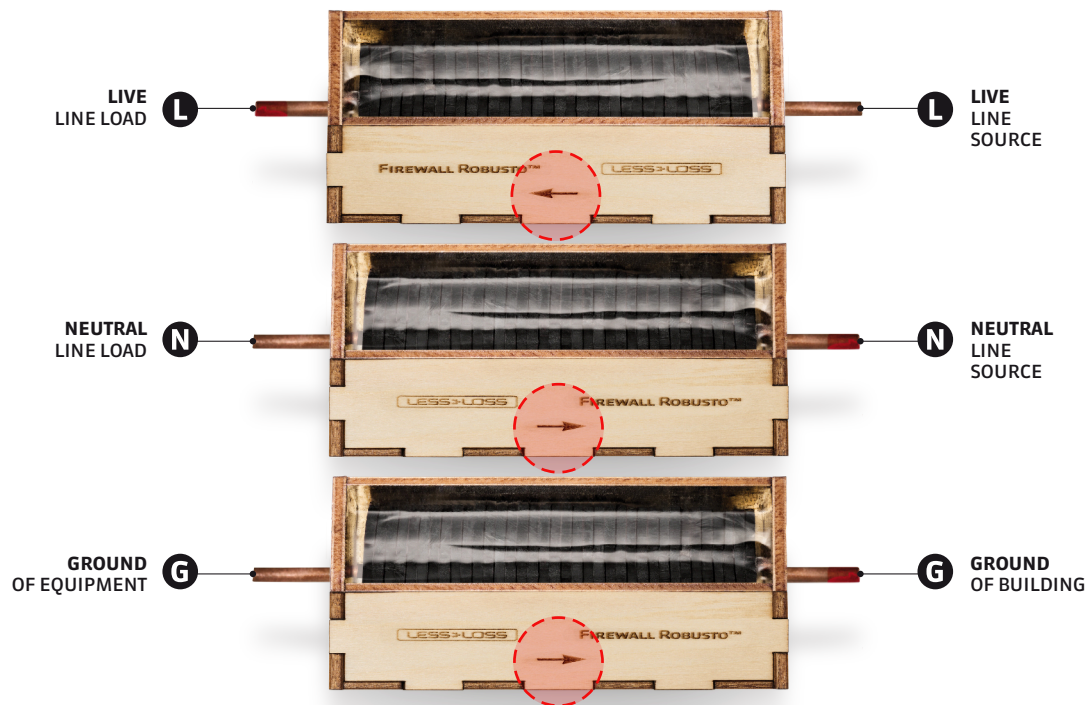

As this is 6mm², a large iron is necessary. (We use 150 Watts.)