

Firewall Robusto™

HOW TO CONNECT DIY SINGLE POLARITY FIREWALLS

DIY version for Self-installation

SOLDERING


Please solder one end, then let it cool. Only then, solder the other end.



FIND THE ARROWS
ON THE SIDES

POSITIVE DC LINE


Positive DC line to be connected this way:

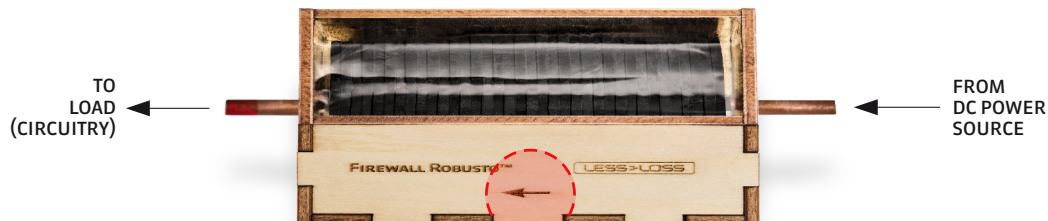

NOTE THE DIRECTION
OF ARROW!

NEUTRAL (RETURN) LINE

Neutral (return) line to be connected this way:

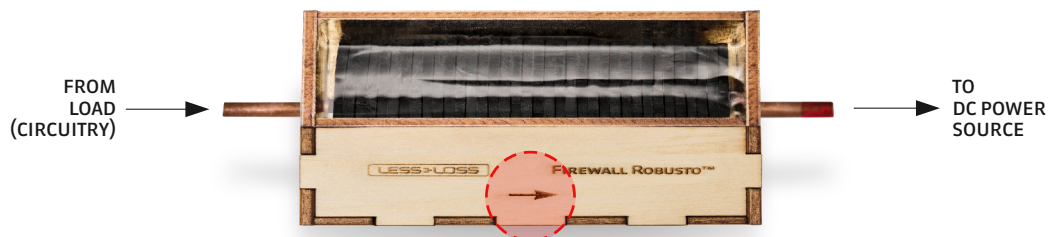

NOTE THE DIRECTION
OF ARROW!